


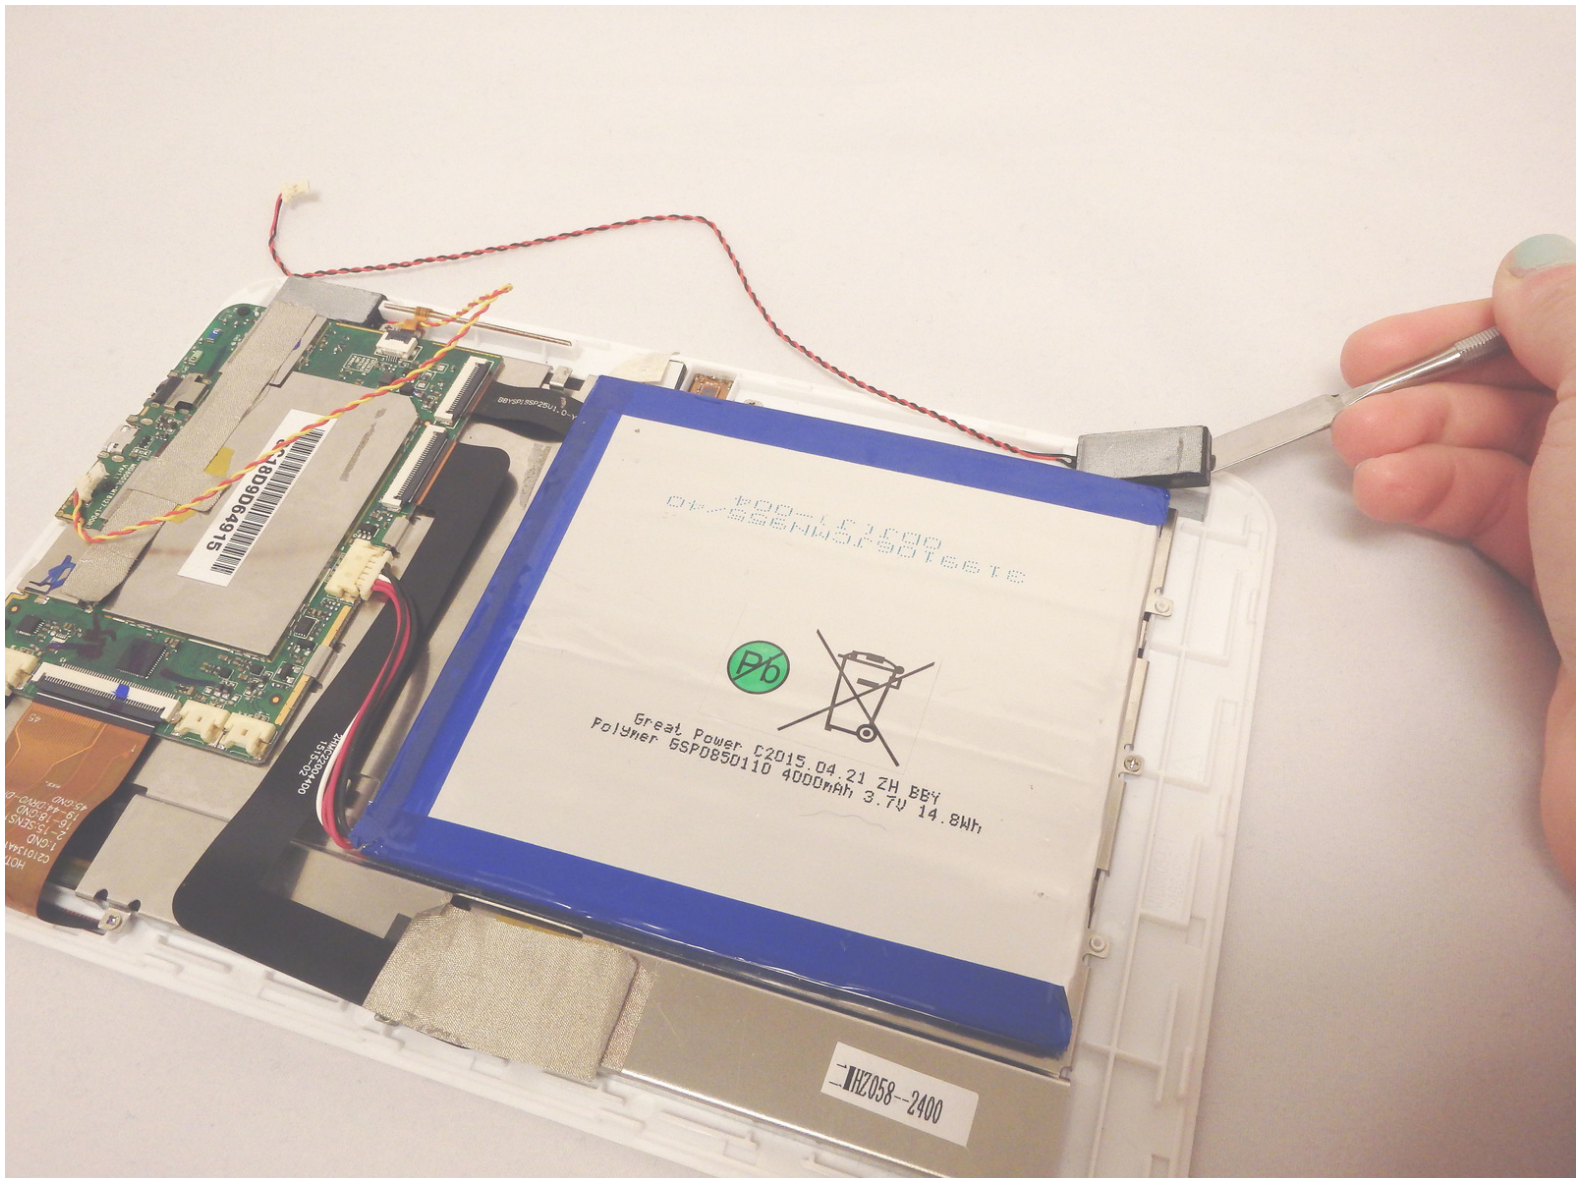

# Insignia Flex 8 NS-P16AT08 Speakers Replacement

This guide will show you how to remove the speakers from your Insignia Flex 8.

Written By: Jose Diaz



## INTRODUCTION

If your tablet speakers are not working or you would like them to work better, follow this guide to replace them.


---




### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Metal Spudger](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Casing

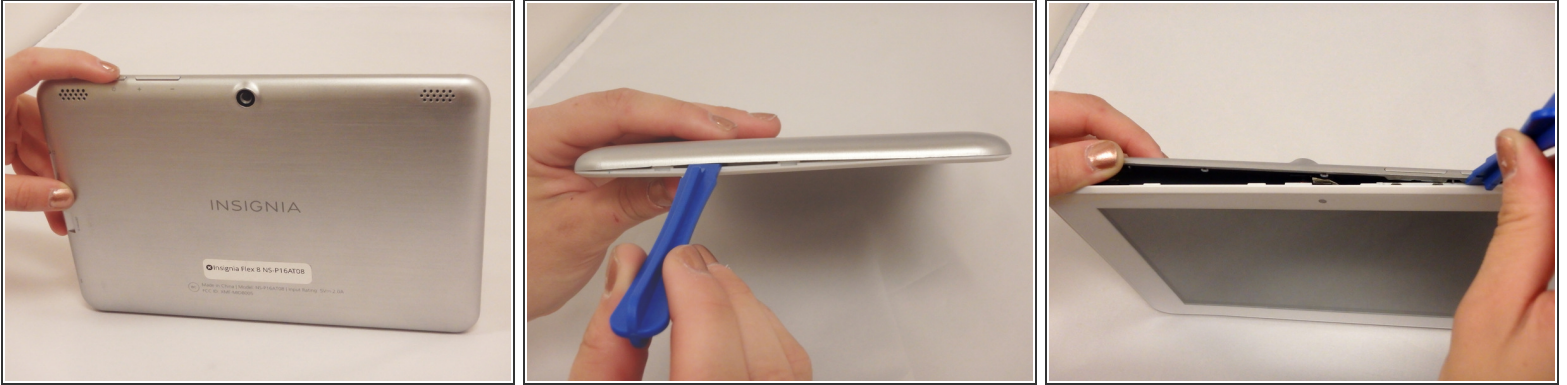

 Make sure device is powered off.

- Wedge the plastic opening tool anywhere in the seam between the back casing and screen.
  - Slide the plastic opening tool along the sides and corners of the seam of the device while it separates from the screen.
-  You will hear the popping sound of the plastic connections separating from the device.



## Step 2



- Lift the back casing away from the screen.
- Set casing aside.





## Step 3 — Speakers

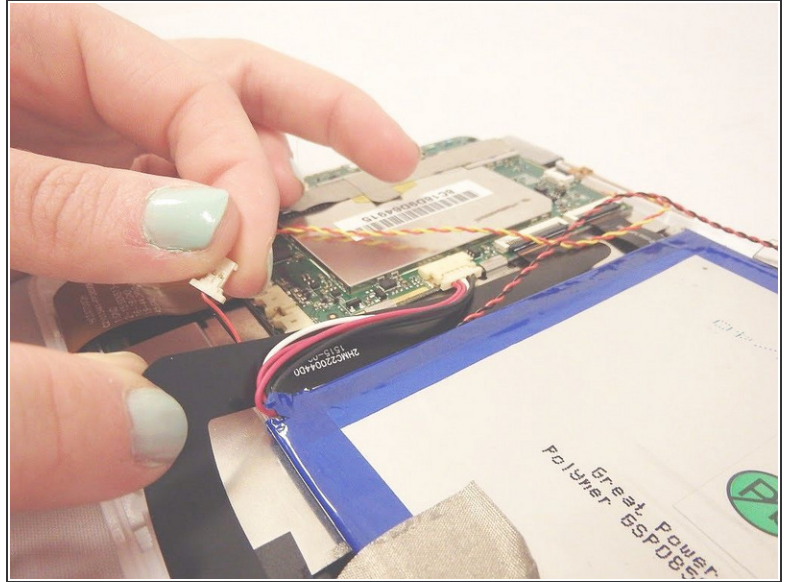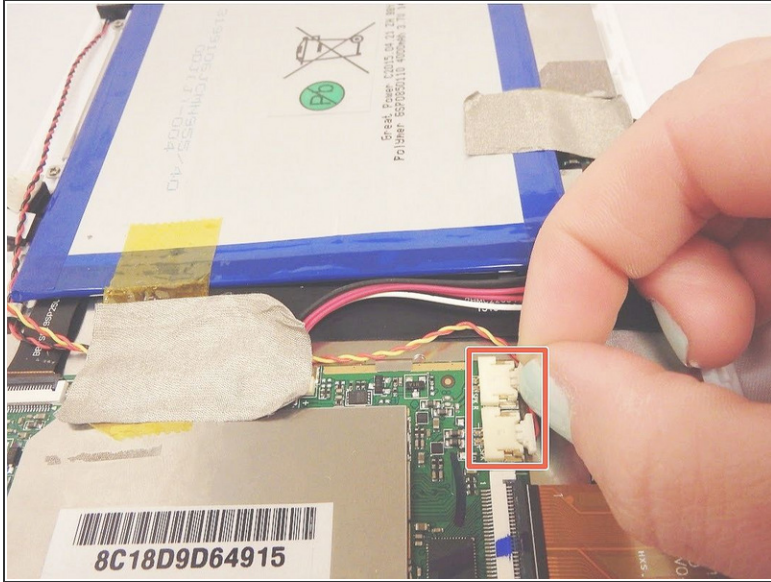


- There are two connections that attach the speakers to the motherboard.
- Unplug the cables from the motherboard by gently pulling them away.
- ⓘ Speaker cables will be free to be removed.

## Step 4

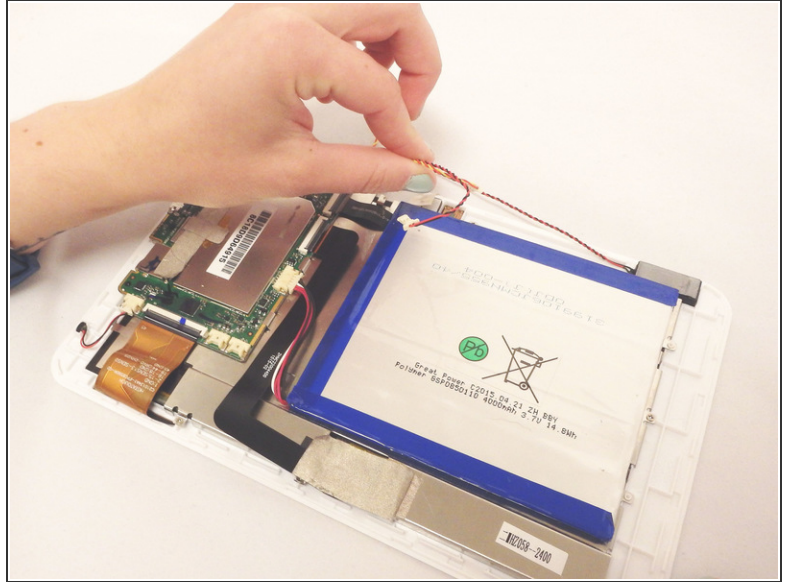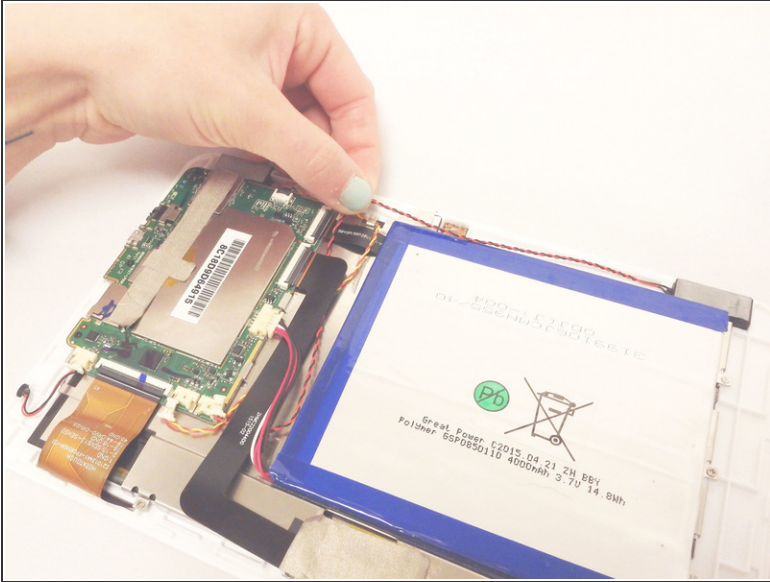

- ✦ Remove the tape that is holding the speaker cables down.
  - Remove the speaker cables from underneath the black connector ribbons.
- i The cables are hooked underneath black connector ribbons; carefully unhook them.

## Step 5

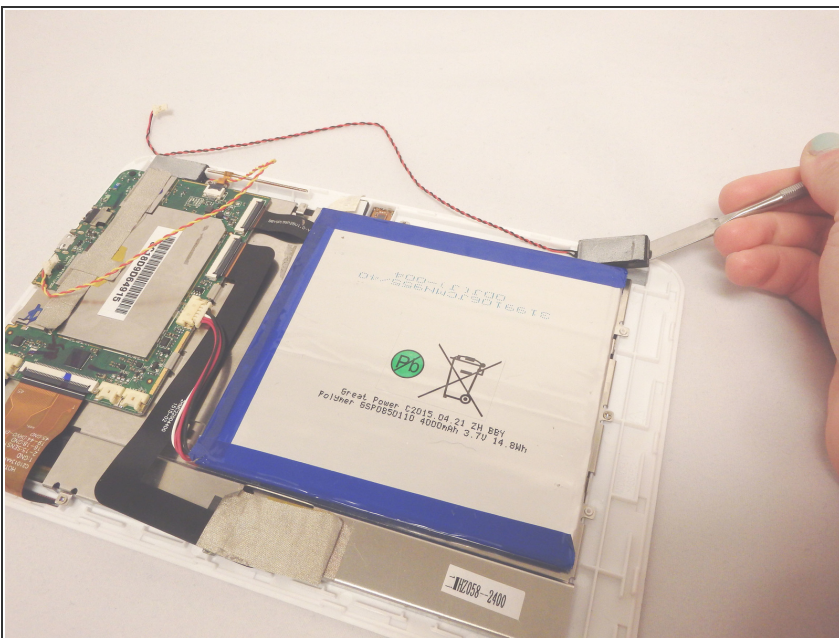

- Gently pry both speakers away from adhesive with metal spudger tool.
- i Always use a nylon spudger or plastic opening tool before a metal spudger. Metal spudgers are great for serious prying power but can damage your device if used incorrectly.
- The speakers can now be completely removed from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 04:50:39 PM.